

Experience Series™

P80 CONSOLE

TRAINING GUIDE



PRECOR®

P80 CONSOLE

Overview

- 15" high resolution capacitive touch LCD screen
- Simple interactions suitable for 'in-workout' use
- Functions and keys easy to locate on the screen or outside of the screen
- Tactile 'Next' generation Motion Controls
- Dedicated LCD windows for machine controls
- TV entertainment and iPod® control from screen
- Workout Guides (Tutorials) videos
- Auto-dim function to increase screen life and conserve energy



P80 CONSOLE

Overview



The P80 console offers clear visuals and a touch-screen layout that encourages program exploration. Multiple preset workouts are designed to help individual users meet their fitness goals, and the console keys and durable motion controls are responsive and easy to use.

P80 CONSOLE

Machine Controls

 
Console Keys and Motion Controls



P80 CONSOLE

Welcome Screen

The Welcome Screen presents the user with three simple choices to get started. The P80 console offers a variety of different workout options. The following sections explain the type of workouts available and how to get started using them.

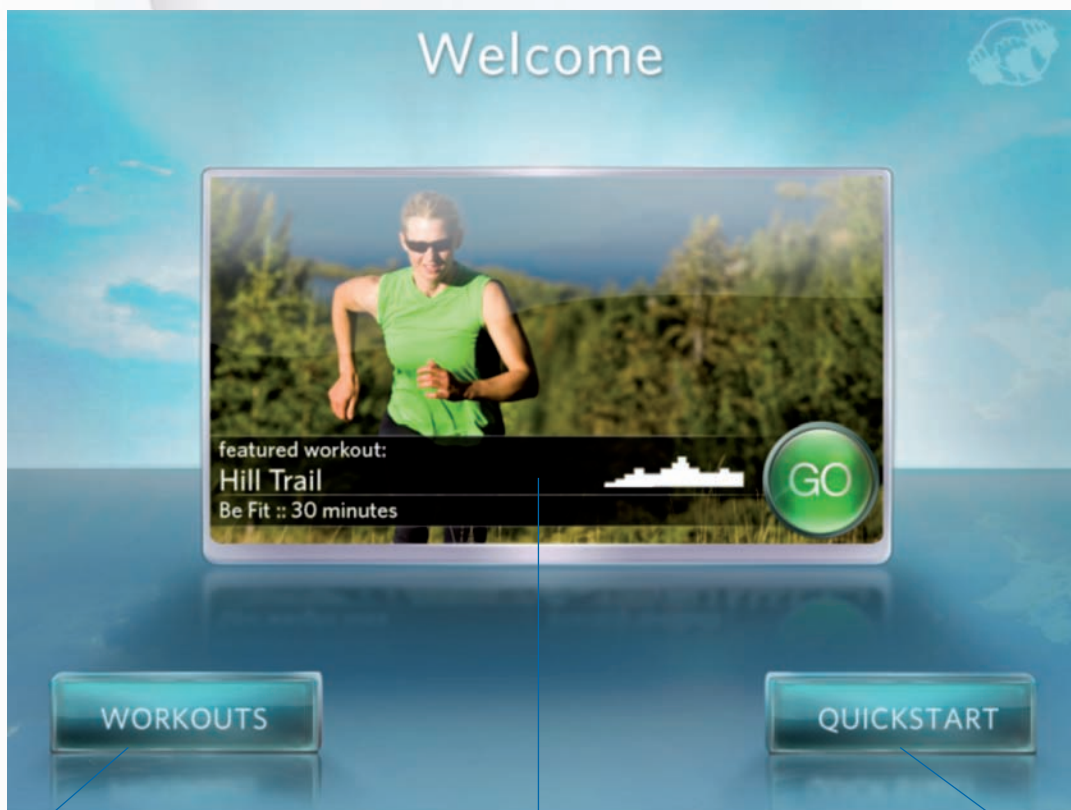

Workout Library

Featured Workout

 
Simple manual mode

P80 CONSOLE

Starting a Featured Workout

The Featured Workout appears in a panel on the Welcome Screen. Use Featured Workouts to explore the fitness benefits of preset programs and to add variety to your workout.

To begin a Featured Workout, touch **GO** on the Featured Workout panel.

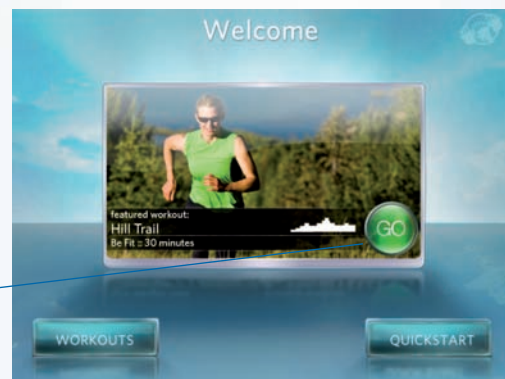

Featured Workouts encourages users to explore workout programs they may not have known about or cared to try.

The Preview Panel encourages exploration by:

1. Showing a visual representation of the workout
2. Giving a short description of the workout
3. Showing a graphical representation of the workout profile

 


P80 CONSOLE

Starting a Preset Workout

Preset Workouts offer a customized approach to help users achieve specific exercise goals.

NOTE: In all workouts except Heart Rate Control, adjust the motion controls to raise or lower the resistance/incline setting. The workout intensity will adjust the remainder of the workout profile accordingly.

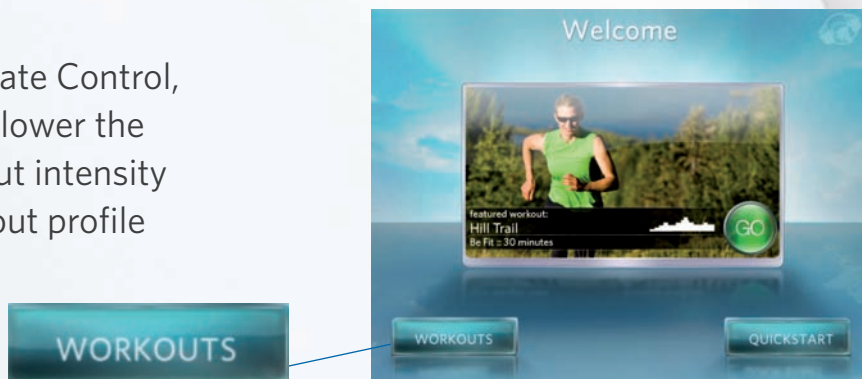

Some Preset Workouts use age and weight to calculate calories and heart rate targets, you are prompted to enter this information. If no information is entered, the workout uses the equipment default (150lbs / 35 years) settings to calculate workout values.

To begin a preset workout:

1. On the Welcome screen, touch Workouts.
The Workouts library panel screen appears.
2. Workouts are organized by goal categories on the screen. They can be expanded to view all the workouts available in that goal group. To view available workouts for a particular goal, touch a workout heading for that goal.



P80 CONSOLE

Starting a Preset Workout

3. To start a specific workout, touch the workout name, then touch **GO** on the Preview Panel. The words Workout Beginning appear on the screen and the **Manual Workout** begins.

NOTE: For treadmills, the equipment begins a three-second count down **3, 2, 1**, before the belt starts moving.



4. Anytime during a workout, you can press **Pause**. **When** pressed, the workout pauses and you can choose to **Resume or Finish your workout**. **To continue your** workout, touch **Resume**.

 
If you choose to finish a workout, the Summary screen displays your workout status for that session.

P80 CONSOLE

Starting a QuickStart Workout

Starting using QuickStart™:

QuickStart launches a manual mode program that includes 'no variations' in the workout profile. The user must push their performance by adjusting the intensity on the Motion Controls.

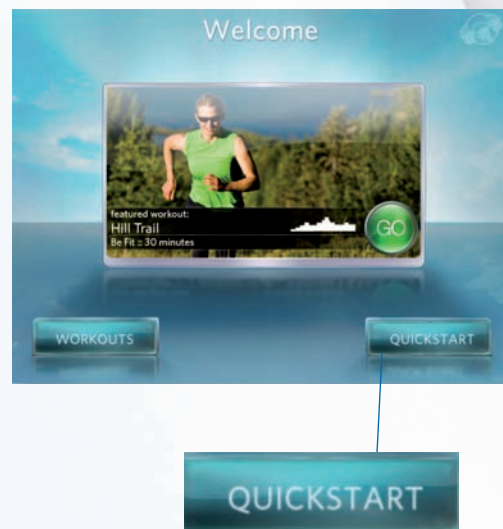

To begin exercising immediately:

1. Touch QuickStart
2. The words **Workout Beginning** (or **Tread Starting** when on the treadmill) appear on the screen and the Manual workout begins.
To view available workouts for a particular

NOTE: For treadmills, the equipment begins a three-second count down **3, 2, 1**, before the belt starts moving.

Anytime during a workout, you can press **Pause**. When pressed, the workout pauses and you can choose to Resume or Finish your workout.

If you choose to finish a workout, the **Workout Summary** screen displays your workout status for that session.

P80 CONSOLE

Screen Navigation Keys

Status Bar

Drop down workout stats that can be customized on the fly

Workout Progress panel

Workout Menu on workout progress panel

- **Workouts** - to change workout profile
- **Duration** - to set duration of the workout
- **Age/Weight** - for calorie and heart rate calculations
- **Targets** - to target distance / calories
- **Muscle Monitor / Stride Dial** - to target specific muscles

Media Source panel

Slide the panels side to side on the screen to see the Media Source panel

Views Key - 3 views:

- Workout Progress / Media Source
- Status Bar / Icons Bar with media
- Media view showing media playing full view

Touch icons to quickly change between **Workout Progress panel** and **Media Source panel**



P80 CONSOLE

iPod® / iPhone®

 
iPod® / iPhone® Dock

User selects an album /video and plugs it in to the iPod dock.



iPod® / iPhone® Media panel

The touch screen interface allows you to easily drag your finger across the screen and control playback.

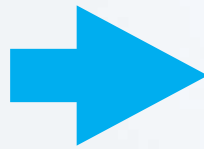

P80 CONSOLE

Machine Controls

USB Port

USB port allows easy serviceability and software upgrades

iPod® / iPhone® Dock

Connection via a standard 30-pin flexible / replaceable connector

Status Light (network-only feature)

Radio Frequency ID reader for exerciser identification



Cleaning the Console and Display

The console and screen require little maintenance once installed. Precor recommends that you clean the console and screen before and after each exercise session.

To remove dust and dirt from the console case and Motion Controls:

- Wipe all exposed surfaces with a soft cloth that you have moistened with a solution of 30 parts of water to 1 part of Simple Green® (for more information, visit www.simplegreen.com).

To clean the screen:

- The manufacturer recommends diluting one part 91% isopropyl alcohol solution in one part water, or using the 91% isopropyl alcohol solution in its original strength. Be sure to follow the solvent manufacturer's precautions and directions when using any solvent.
- Caution: Potentially hazardous situations associated with the use of isopropyl alcohol may result in minor or moderate injury and property damage. To avoid these situations, follow all instructions and recommendations in the manufacturer's Material Safety Data Sheet and product label.

IMPORTANT: Do not use any acidic cleaners. Doing so will weaken the paint or powder coatings and void the Precor Limited Warranty. Never pour water or spray liquids directly on the console or console's screen.

HOW TO CONTACT US

Phone (800) 347-4404
When the voice menu begins, press 7.

Email custsupp@precors.com

Business hours 6:00 AM – 5:00 PM Pacific Time
Monday – Wednesday
6:00 AM – 3:00 PM Pacific Time
Thursday – Friday

Main mailing address Precor Incorporated
PO Box 7202 Woodinville, WA 98072

Mailing address for returns Precor Incorporated
Attention: Receiving / Bldg. W5
(warranty items and parts) 24309 Snohomish-Woodinville Road
Woodinville, WA 98072

NOTE: Option 7 on the Precor voice menu is a support line created for 880 Line launch customers only, so the menu prompts do not mention it. When you call our technical support line for assistance in troubleshooting, please have the following information at hand. Your Precor customer support representative may need it to provide you with the best possible service.

- Type and model of equipment requiring service (for example, TRM 885 treadmill)
- Base serial number of the equipment requiring service
- Detailed description of the problem

We will determine the necessary actions based on the information you provide us. In most cases, we will work directly with you over the phone to identify and define these actions. In some cases, a service dispatch will be required and we will send a service provider to your location to complete the repair.

